


INSTALLATION INSTRUCTIONS

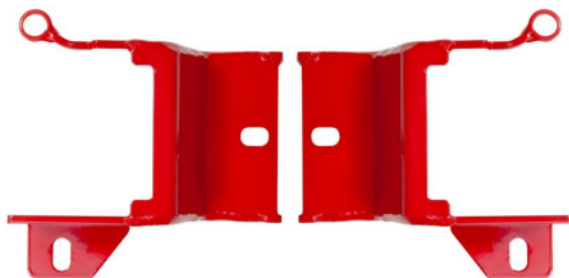

67-69

Front Leaf Spring Mount

PART NUMBER 2724

Technical Support

We strive to provide the utmost pre- and post-sales support for our products. Whether you just need upgrade advice, or assistance in adjusting or installing a product, our experienced support staff is always ready to help optimize your UMI product.

CHAT WITH A UMI PROFESSIONAL TODAY

Need installation advice or clarification on the instructions? Scan the QR code (right) to chat directly with a UMI Professional or use the contact information provided to talk to customer service.

Note: UMI social media accounts do not respond to customer service questions.



CONTACT CUSTOMER SERVICE

Hours: M-F 8:00-4:30 (EST)

Email: support@umiperformance.com

Call: +1 (814) 343-6315

Address: 509 Hemlock Street
Philipsburg, PA 16866

SOCIAL MEDIA

#umiequipped #umiperformance
@umiperformanceinc

Included Parts

Part Description	Quantity	PN
Front Leaf Spring Mount	2 Piece	2724
Hardware Kit	1 Kit	2724-BK

Tools Needed

Properly rated Jack and Stands
SAE Hand tools, sockets, wrenches

INSTALLATION INSTRUCTION

DISCLAIMER

UMI Performance shall not be held liable for any injuries or damages resulting from the improper installation of this product. It is the sole responsibility of the user to ensure that the product is installed correctly and in accordance with all applicable laws, codes, and regulations. The user assumes all risk and liability for any injuries or damages that may arise from the improper installation of this product. It is important to follow these steps carefully and use the proper tools to avoid damaging the vehicle or causing injury to yourself. If you are uncertain about any part of the installation process, it is recommended that you seek the assistance of a professional mechanic.

STEP 1: Disassembly

1) Jack the vehicle up by placing the jack under the rear end. Place the (2) jack stands on the sub frame to allow the leaf springs to unload.

2) Keep your jack under the rear to support the rear end as you remove the three bolts holding the mount in place. Remove bolts on both sides before lowering the rear end to access the leaf spring bolt.

Fig 1.

3) Drop the rear enough to access both leaf spring bolts and remove. Remove your existing leaf spring mounts. **Fig 2.**

4) Before installing new brackets, replace your original j-nut clips with the ones included in your hardware kit. Use a straight screwdriver or pick to remove old clips. 3 new clips per side.

5) Slide new mount into place and install leaf spring bolt. Use a flat washer on the outside of the bracket and the inside of bracket between leaf spring and bracket on both sides. Install nylock nut and torque to 55 ft lbs.

6) Jack rear end up until the leaf spring mount seats into place and install new hardware. The button head bolt goes in the hole to the front of the car. Torque bolts to 35 ft lbs. **Fig 3.**

8) Double check all hardware is tight and set the car back down on the ground.

FIGURES FOR REFERENCE



Fig 1. Remove three bolts holding the perch in place



Fig 2. Remove leaf spring bolt .



Fig 3. Bolt Orientation