


INSTALLATION INSTRUCTIONS

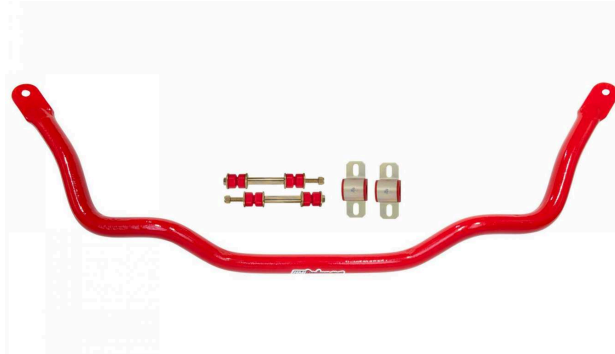

15-20 F150

1 1/2 Front Sway Bar

PART NUMBER 6579

Technical Support

We strive to provide the utmost pre- and post-sales support for our products. Whether you just need upgrade advice, or assistance in adjusting or installing a product, our experienced support staff is always ready to help optimize your UMI product.

CHAT WITH A UMI PROFESSIONAL TODAY

Need installation advice or clarification on the instructions? Scan the QR code (right) to chat directly with a UMI Professional or use the contact information provided to talk to customer service.

Note: UMI social media accounts do not respond to customer service questions.



CONTACT CUSTOMER SERVICE

Hours: M-F 8:00-4:30 (EST)

Email: support@umiperformance.com

Call: +1 (814) 343-6315

Address: 509 Hemlock Street
Philipsburg, PA 16866

SOCIAL MEDIA

#umiequipped #umiperformance

@umiperformanceinc

Included Parts

Part Description	Quantity	PN
1 1/2" Sway Bar	1 Piece	6579
End link kit	1 Kit	90044
Sway Bar Bushing	1 Kit	19-1505

Tools Needed

Properly rated Jack and Stands
SAE Hand tools, sockets, wrenches

INSTALLATION INSTRUCTION

DISCLAIMER

UMI Performance shall not be held liable for any injuries or damages resulting from the improper installation of this product. It is the sole responsibility of the user to ensure that the product is installed correctly and in accordance with all applicable laws, codes, and regulations. The user assumes all risk and liability for any injuries or damages that may arise from the improper installation of this product. It is important to follow these steps carefully and use the proper tools to avoid damaging the vehicle or causing injury to yourself. If you are uncertain about any part of the installation process, it is recommended that you seek the assistance of a professional mechanic.

STEP 1: Disassembly

- 1) Jack the vehicle up by placing the jack under the front cross-member. Place the (2) jack stands behind the front tires on the frame to allow the front control arms to unload.
- 2) Start by disassembling the old sway bar. Remove the end links and frame bushings.
- 3) Once the old sway bar is out, locate the new supplied sway bar bushings. Using the supplied grease, apply lube to the mating surface of the bar and sway bar bushing. Fig 1.
- 4) Install the Poly Bushing to the new sway bar.
- 5) Install the metal straps and lift the bar into place leaving the bar loose for easier end link install.
- 6) Install front end links, and tighten. Fig 2.
- 7) Once installed end links are tight, go ahead and tighten sway bar bushings. Fig 3
- 8) Make sure there are no clearance issues with any other parts by rotating the steering wheel back and forth.
- 9) Double check all hardware is tight and set the truck back down on the ground.

FIGURES FOR REFERENCE

Fig. 1 Install New End Links



Fig 1. Apply Grease to the Bushing Mating Surface.

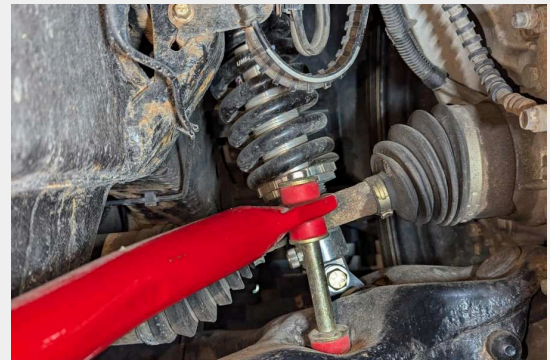


Fig 2. Tighten End Links.

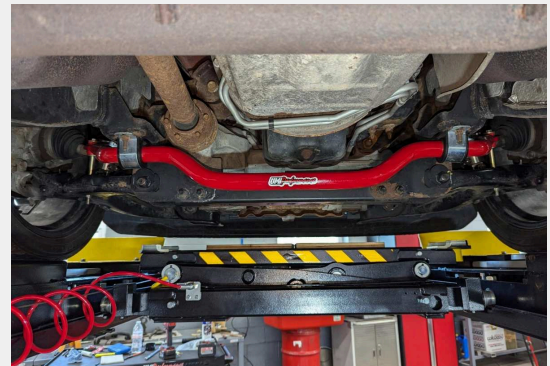


Fig 3. Sway bar bushings Tight.